








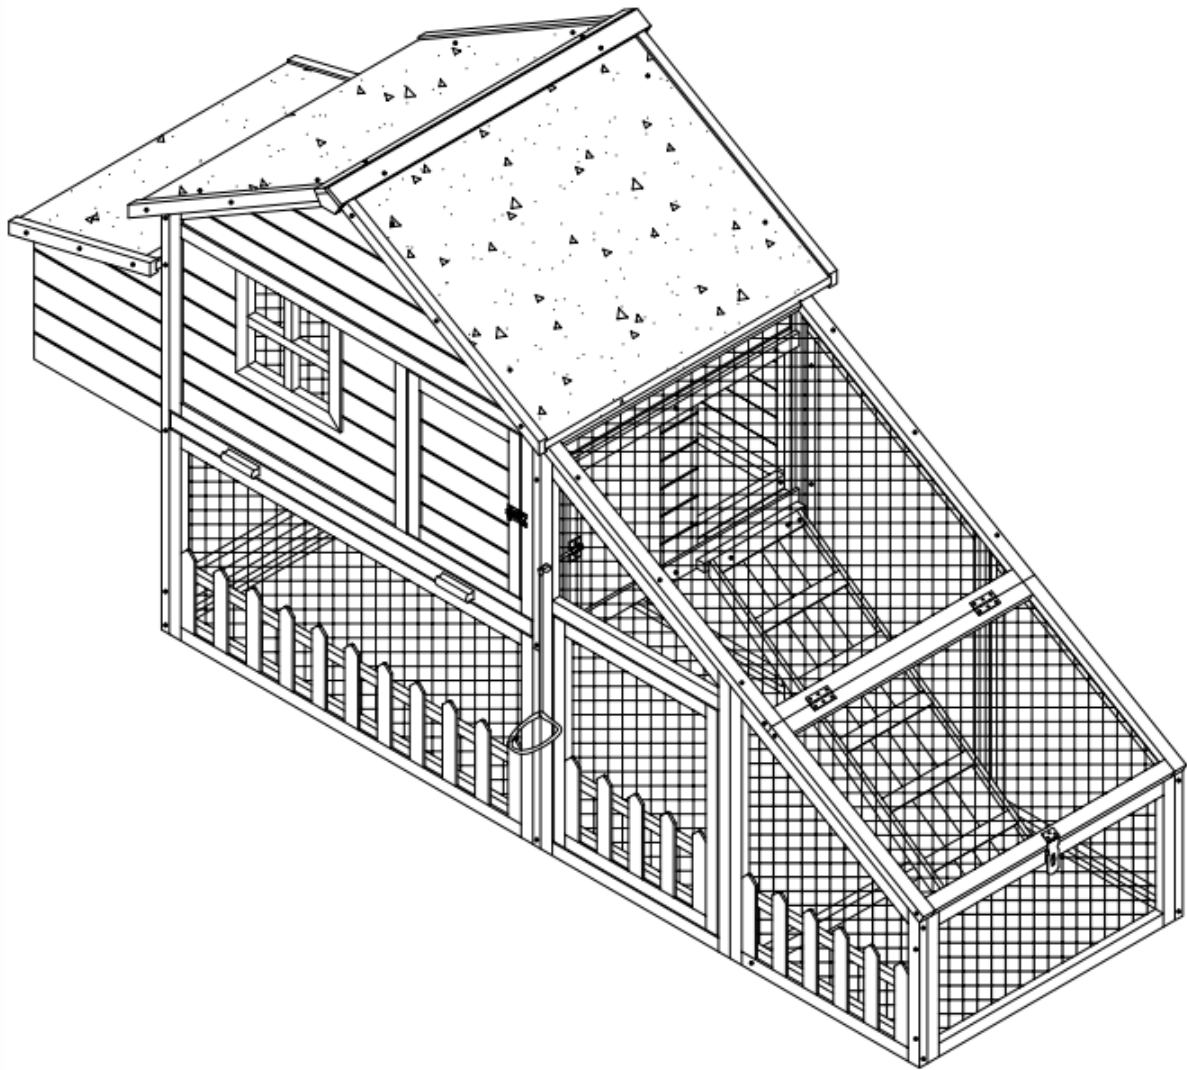





Pathosio Pets Chicken Coop Assembly Manual




**For any customer feedback, questions, or problems,
scan the QR code to open a ticket on our website:**




Parts List


P1	 3.5×50mm	13pcs+1spare	P2	 3.5×40mm	32pcs+1spare
P3	 3.5×35mm	10pcs+1spare	P4	 3.5×25mm	4pcs+1spare
P5	 6×50mm	8pcs	P6	 6×30mm	8pcs
P7	 3×14mm	17pcs+1spare	P8		2pcs
P9	 400mm	1pc	P10		1pc
P11		1pc	P12	 70×10mm	1pc

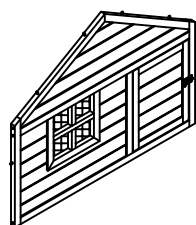


Ⓐ *1

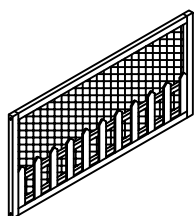


Ⓑ *1

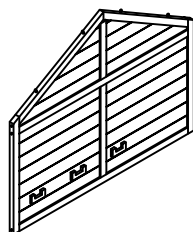


Ⓒ *1

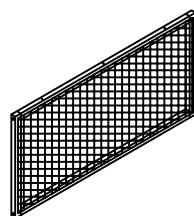


Ⓓ *1

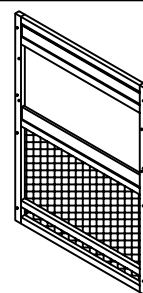


Ⓔ *1

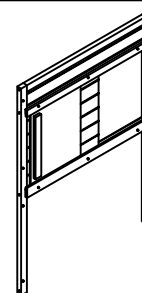

Ⓕ *1




Ⓖ *1




Ⓗ *1




Ⓘ *1



Ⓙ *1

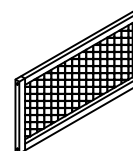


Ⓚ *1

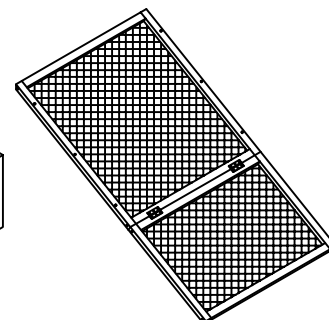

Ⓛ *1




Ⓜ *1




Ⓝ *1




Ⓞ *1

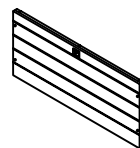


Ⓟ *1




Ⓠ *1




Ⓡ *1

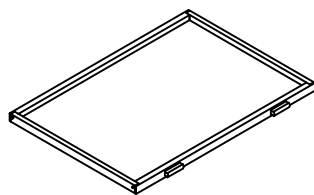


Ⓢ *1

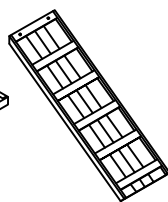


Ⓣ *1

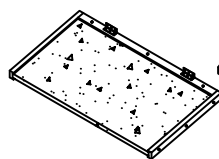

Ⓤ *1

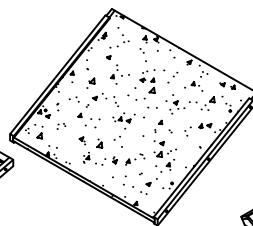

Ⓥ *2



Ⓦ *1



Ⓧ *3




Ⓨ *1



Ⓩ *1

Assembly Instruction

Assemble "C" and "D" using
3 "P1" screws

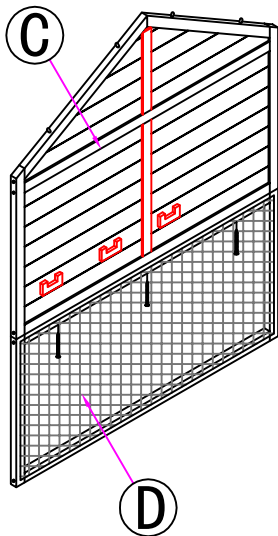


P1*3

E

Find 2 wheels "P8" and assemble
them to the "E" piece using
8 "P6" screws


P8

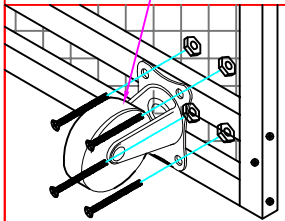

P6*8

STEP1



Use 16 "P2" screws to assemble parts A,B,C,E,F

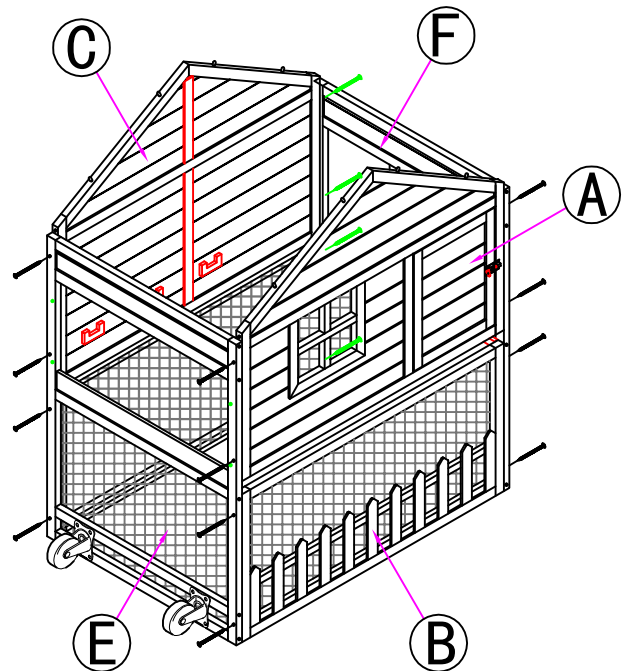


P2*16

STEP2

Find the 3 "X" and tray "S", place them
in the position shown below

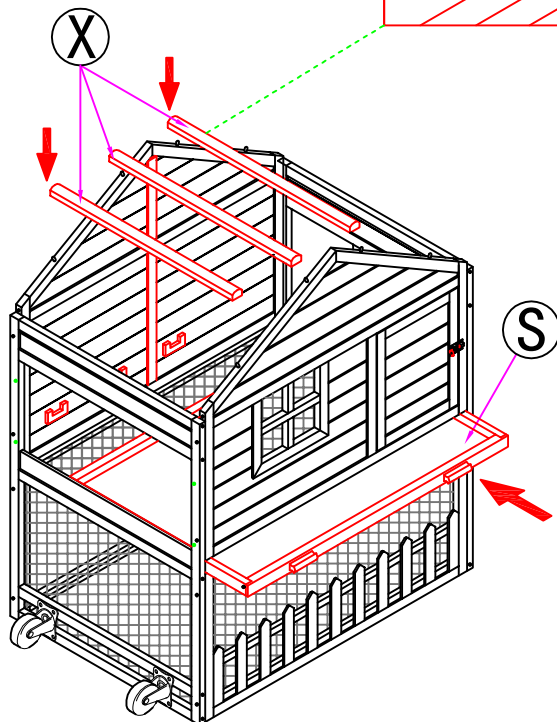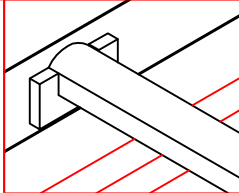


STEP3

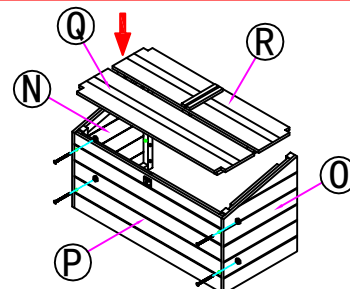

P5*4

Assemble the nesting box
as shown in the left picture



Install the assembled
nesting box to the
assembled house
using 4 "P5" screws
and place the "Y"
piece inside

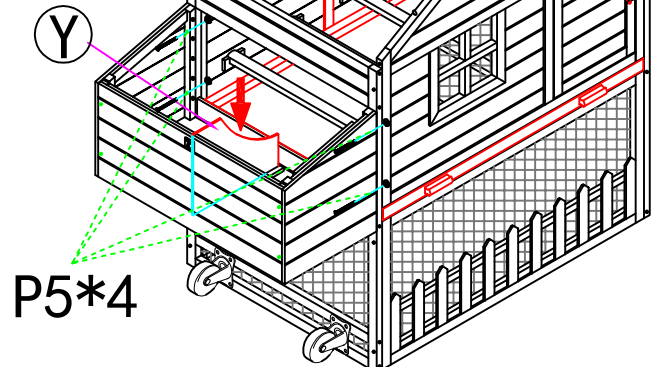

P5*4

STEP4


Install "U" piece with 6 "P7" screws

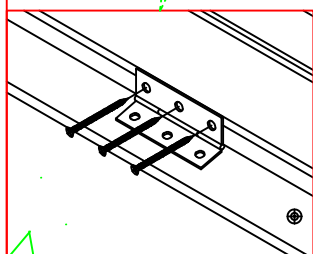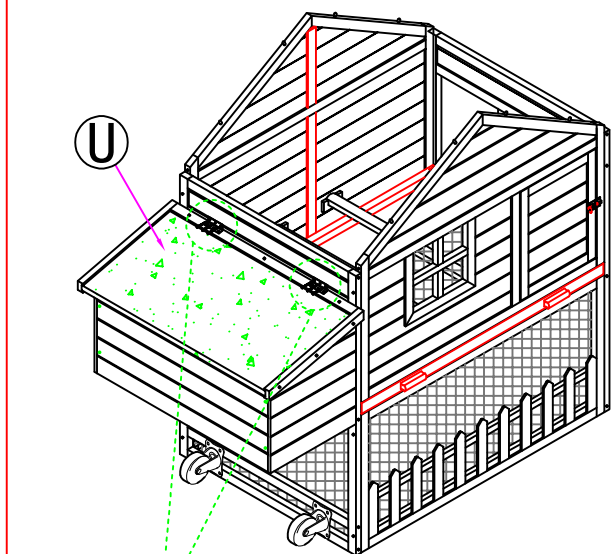

P7*6

STEP5


Install 2 "V" pieces with 8 "P3" screws

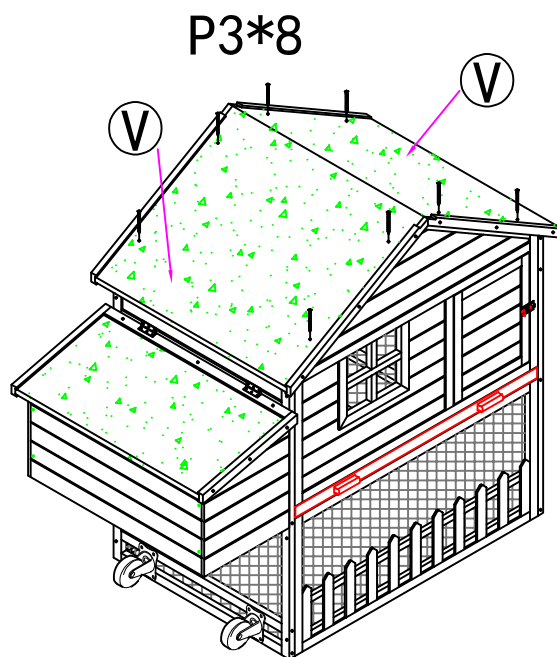

P3*8

STEP6


Install "W" piece with 4 "P4" screws

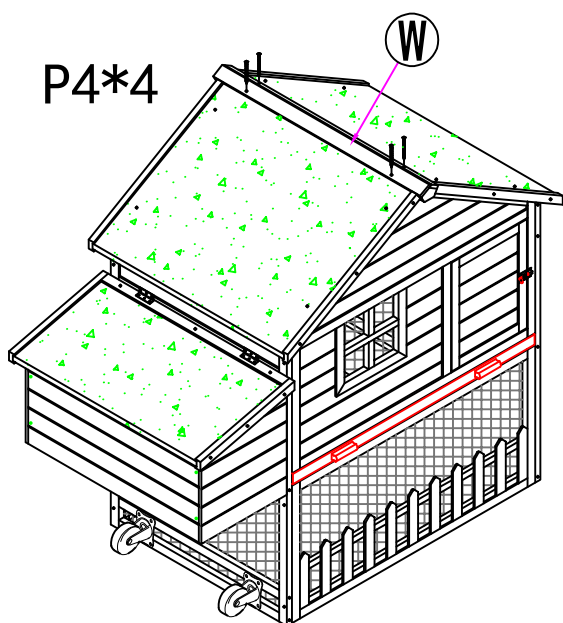

P4*4


STEP7

Install "P9" parts on the sliding door with 4 "P7" screws
And install "M" part under the door with 2 "P3" screws

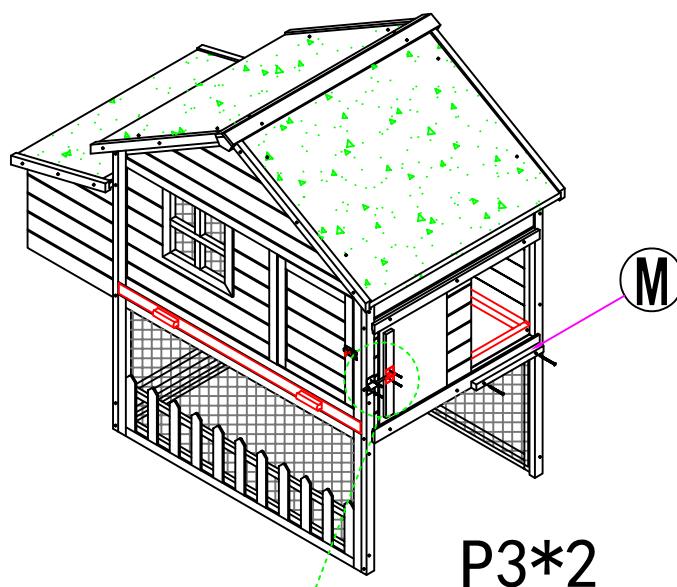

P3*2


P9

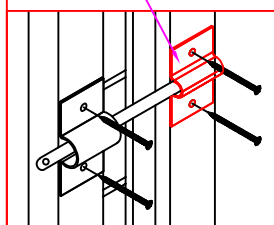

P7*4


STEP8

Install "T" ramp with 2 "P2" screws

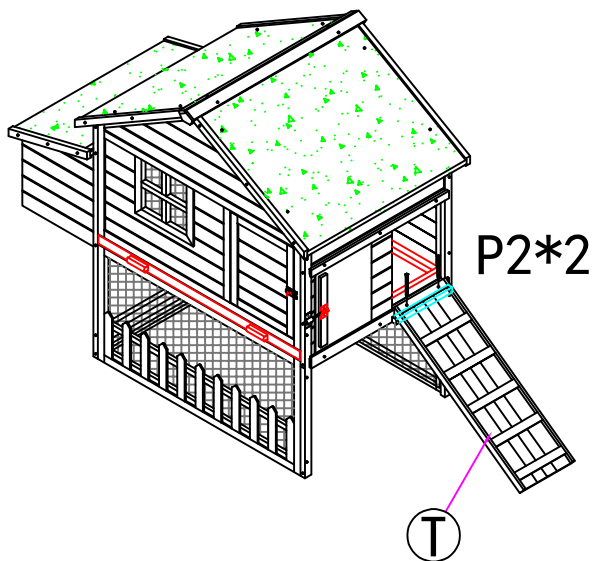


STEP9

Install G,I,H,J pieces with 4 "P1" screws as shown below

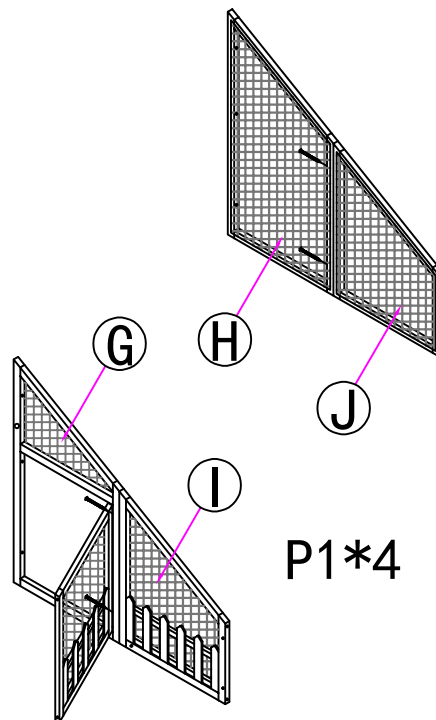

STEP10



Assemble the just-installed G,I,H,J parts to the assembled house with 6 "P1" screws

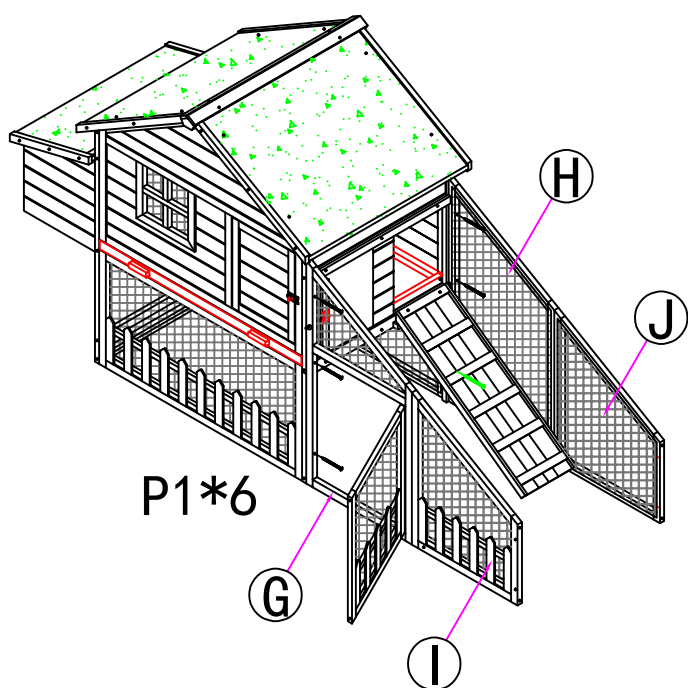

STEP11


Install "Z" bar with 2 "P2" screws, and use 2 "P2" screws to fix the ramp to the "Z" bar.

P2*2

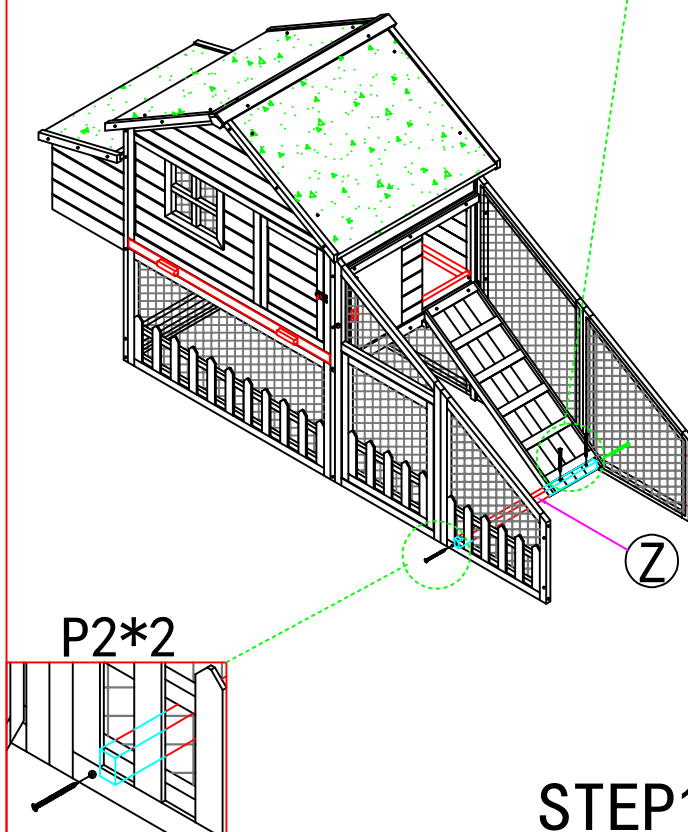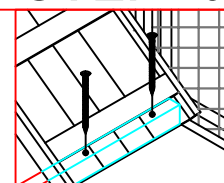


STEP12


Install the remaining metal bar of "P9" on the outside

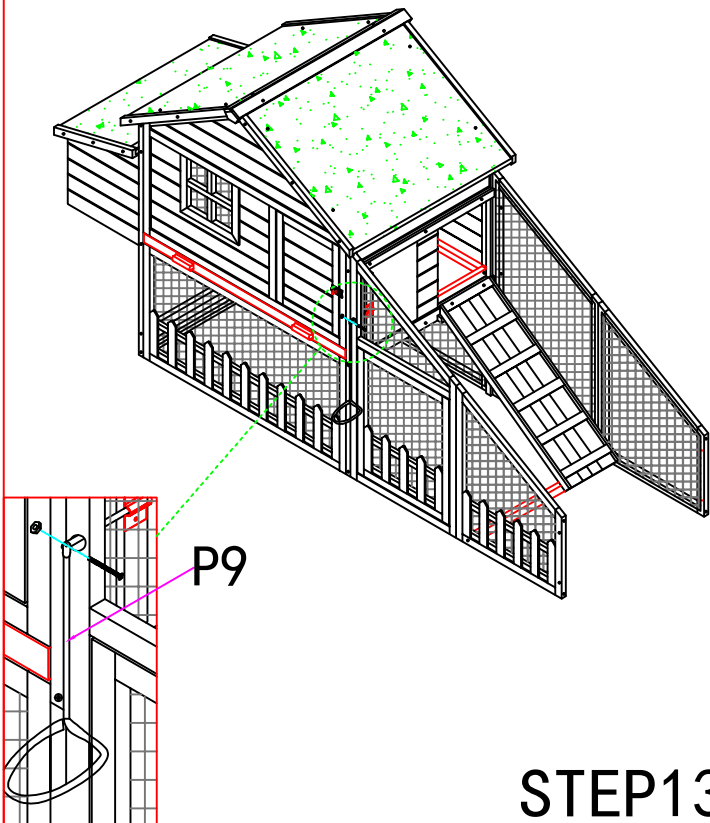

Install "K" piece with 4 "P2" screws

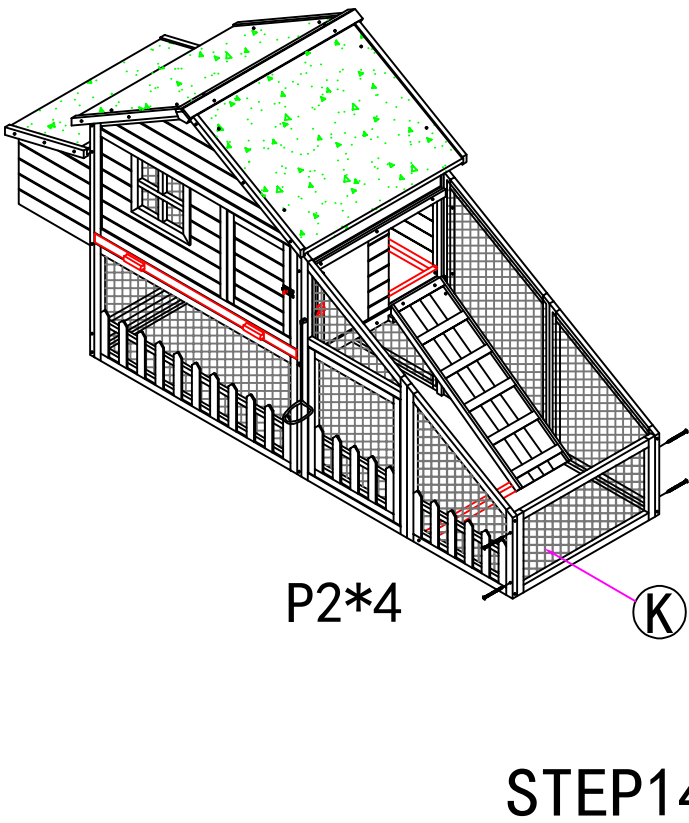

Install "I" piece with 6 "P2" screws

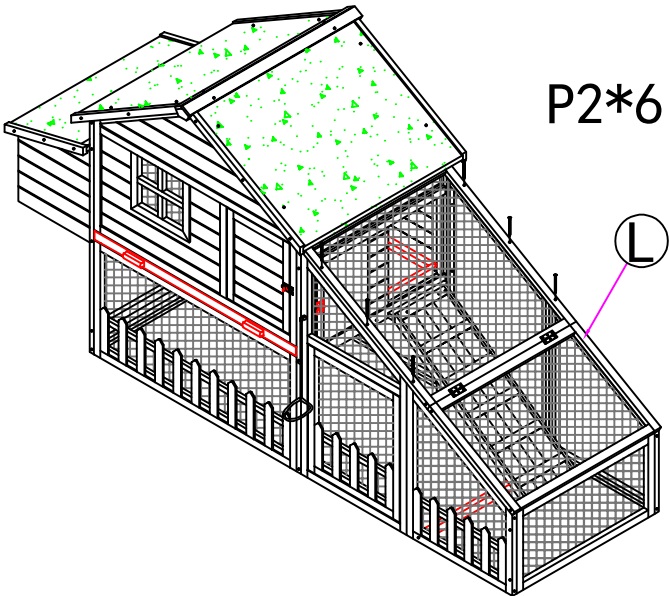

Finally, install the lock latch "P10" as shown below

